

What is Included with HSRF-CONN-EXT-KIT?


A. Barcode Reader Adapter

Non-booted  Booted

B. Test Coupler



C. Power/Serial Connection

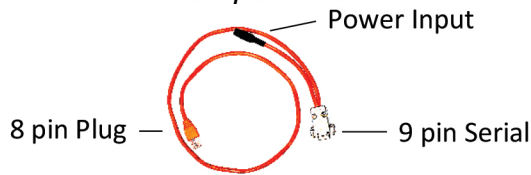

What is Needed from HSRF-ENC-KIT

D. Barcode Reader



E. Power Supply



I. Pre-Installation Test

1. Insert non-booted end of the Barcode Reader Adapter Booted End (Part A Above) into the Barcode Reader (part D).
2. Insert the Barcode Reader Adapter (part A) into the test coupler (part B).
3. Insert the Power/Serial Connector (part C) 8 pin plug into the test coupler (part C).
4. Insert the Power/Serial Connector 9 pin Serial into your Windows computer.
5. Plug the Power Supply (part E) into an AC socket and the power barrel end into the Power/Serial Connector (part C).
6. On the PC, open *Realterm and preform barcode scans by placing cursor in input window and scan any barcode to verify proper operation and connection between Access Control Reader and Windows PC.
7. Once the Huzzard equipment is verified as functional, install any other user supplied equipment and run scan tests.
8. After all equipment has been verified functional, remove the Test Coupler (part B).
9. Move on to Field Installation.

*Realterm can be found at realterm.sourceforge.io

